 
 


USER MANUAL

Wireless Mobile speaker

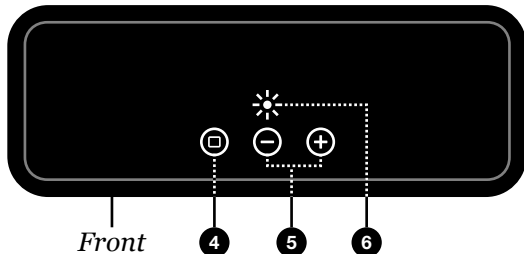

 
lowdi.com

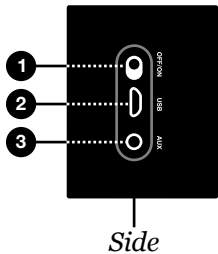

- 1 *On/Off switch*
- 2 *Micro USB charging port*
- 3 *Audio input*
- 4 *Main control button*
- 5 *Volume controls*
- 6 *LED status light*


A

Connect Wirelessly via Bluetooth

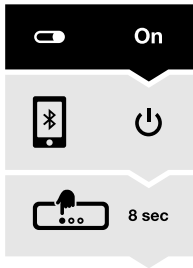




Make sure that Lowdi is fully charged and powered ON (1) and that your Bluetooth-enabled device (phone, tablet, laptop etc.) is powered on too.

Access the Bluetooth settings on your device and enable Bluetooth connections. Search for new Bluetooth devices.

While your device searches, press and hold the  button (4) on the front side of Lowdi for 8 seconds. Lowdi plays a sound and blinks its LED light (6) once it has entered pairing mode.



Select 'Lowdi' from the list of Bluetooth devices on your audio device. Lowdi will play a different sound to let you know that it is connected.

Lowdi is now ready to play your favourite music. Press the  button (4) to pause and play. You can adjust the volume with the designated volume  |  controls (5).

In case the Bluetooth connection is not working properly, please consult the special notes section on the other side of this document or consult www.lowdi.com.

B

*Connect
via cable*



*Make sure that Lowdi is fully charged and powered ON (1)
and that your audio device is powered on too.*

*Plug the supplied audio cable into the input marked AUX (3).
Lowdi is now ready to play your favourite music.*

Specifications

TECHNOLOGY

This device supports Bluetooth, built on version 4.0, and is compatible with most mobile phones, tablets, laptops and other Bluetooth-enabled devices.

BLUETOOTH VERSION

- Bluetooth v4.0, backwards compatible with previous versions
- Bluetooth range: 10m, or approximately 33 feet
- Frequency: 2.4GHz, or 2400MHz

IN THE BOX

- Lowdi, carrying pouch, USB cable, audio cable, manual, stickers



PRODUCT AND TECHNICAL SUPPORT

- E-mail: info@en.lowdi.com
- Online: www.lowdi.com

WARRANTY AND TERMS OF USE

- Online: www.lowdi.com/warranty

Charging Lowdi

LOW BATTERY

When Lowdi's battery is low, the status LED light will blink and an alert will sound once every 30 seconds. Lowdi will power off automatically 5 to 10 minutes after the first alert.

CHARGING

Charge your Lowdi via the supplied USB charging cable. While Lowdi charges the status LED will turn on until fully charged. A full charge may take between 2 to 3 hours. When connecting Lowdi to charge via USB while playing, Lowdi's signal may stop automatically. Turn the device off and on to resume playback.

Audio controls

PAUSE / PLAY

Short press and release the main control button (4) to play or pause music.

VOLUME ADJUST

You can adjust the volume by using the designated volume controls (5).

PREVIOUS / NEXT

While the music is playing, press and hold the plus button (5) to skip one track forward. Press and hold the minus button (5) to move one track back.

Additional phone controls

ANSWER CALL

While paired with your phone, press the main control button (4) to answer an incoming call.

END CALL

To end a call, simply press and immediately release the main control button (4). A tone will sound to indicate the function has been completed.

REJECT CALL

Press and hold the main control button (4) for 3 seconds to reject a call. A tone will sound to indicate the function has been completed.

REDIAL

In standby mode, press the main control button (4) twice.

VOICE DIAL (ON SELECTED DEVICES)

In the standby mode, press and hold the main control button (4) for 3 seconds.

TRANSFER CALL FROM SPEAKER TO PHONE

During a call, press and hold the main control button (4) for 3 seconds until you hear a tone. The same operation can transfer the sound from your phone to a Bluetooth speaker.

Special notes

- Pairing mode will last up to five minutes to ensure the device is found.
 - Once paired with a device, Lowdi will automatically reconnect when powered on. To enter pairing mode to connect a different device, first turn off the Bluetooth of the previously connected device.
 - When connection is lost due to exceeding the effective range, Lowdi will automatically reconnect if your device reenters the range within 10 minutes.
 - Each Bluetooth device is different. Please check the User Guide for your specific device.
- If prompted for a PIN or Password during Bluetooth connection, enter: 0000, and confirm.
 - Use the supplied audio cable if Bluetooth is not supported on your device.
 - When connected to a computer via the USB port, Lowdi can function as a USB speaker on some systems.
 - In case of playback problems it is easy to reboot your Lowdi. Make sure that the device is powered on, connect it via the USB charging cable and switch it off for a few of seconds before turning it on again.

Battery information

Lowdi is powered by a rechargeable battery. For maximum battery performance, always use the supplied USB charging cable and promptly disconnect the device when charging is complete or the battery is full.

Avoid extreme weather conditions, as these may hinder the battery's capacity. The ideal temperature for this device is 59°F to 78°F or 15°C to 26°C. Any extreme weather can impair the performance of the device and may cause it not to operate.

A fully charged battery left unused may result in complete discharge over an extended period of time.

For the safety of the environment, never dispose of any battery in the trash. For your safety do not damage the battery or dispose of batteries in a fire as this may cause an explosion.

Although the battery can be charged and discharged multiple times, the battery will eventually wear over time. Following the advice in this manual can help improve and extend your battery's life.